



# ZEN HEMIPAN QUICK START

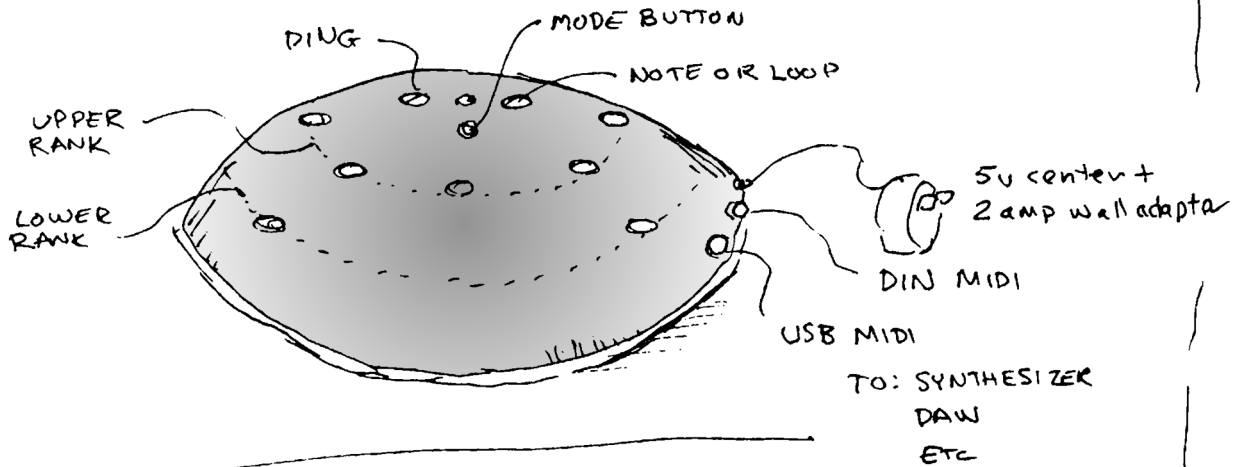

MODE	
START	CELTIC MINOR
1 FLASH	
2 FLASH	UPPER RANK MIDI CH. 1, LOWER MIDI CH. 2
3 FLASH	LOOP MODE (loop recorder)
4 FLASH	CHORD MODE (lower rank sets chord)
5 FLASH	CHORD MODE + LOOP MODE

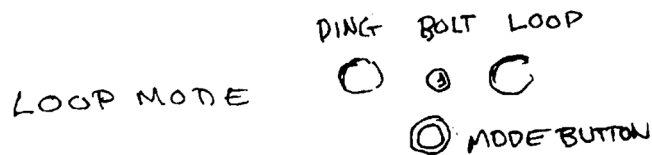

## LOOP PAD PRESS

- 1st press ARMED, RECORD STARTING AT NEXT NOTE
- 2nd press END RECORD → PLAY LOOP
- 3rd press RESET

more information @ [museelectronicinstruments.com](http://museelectronicinstruments.com)